




Bluetooth Wireless Headset with Touch Gesture

User manual



Buttons:

1

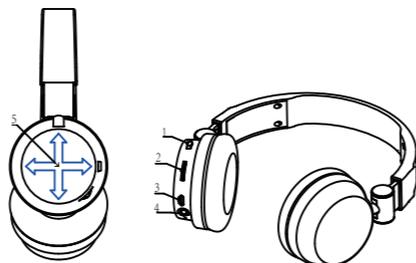

- 1.Power
- 2.Multifunctional button(Previous song/V+, Next song/V-, Play/Pause)
- 3.Micro USB jack(for charging)
4. ϕ 3.5mm audio jack
5. Touch area

Basic specifications and parameters

2

Battery: 3.7V/250mAh polymer lithium battery
Charging Interface: Micro USB
Charging input spec: 5V/500mA
Charging indication: red LED on
Charging time: 2-3 hours
Successive music time or talk time: about 8 hours
Gesture touch functions

Speaker&MIC

3

Speaker diameter: ϕ 40mm
Impedance:32 Ω
S.P.L.:110dB S.P.L.at 1KHz
Rated power:20mW
Frequency Response:100Hz-9000Hz

Microphone Unit: ϕ 4*1.5mm
Directivity: all directions
S.P.L.: -38 ± 3 dB
Impedance: ≤ 2 K Ω
Frequency Response:30-16000HZ

Bluetooth parts

4

Bluetooth chip: 9621
Bluetooth version: VER3.0
Pair name: BT570
Pair password: 0000
RF emission rate: +4dBm(Max)
Receive S.P.L: -90dBm
Carrier frequency: 2402-2480MHz
Range: 360*10 meters

Operation

5

Power on: Press the power button 3_{sec} until blue LED on;
Power off : Press the power button 5_{sec} until red LED on;
Pairing: In the state of power off, press the power button about 5_{sec} until the blue and red LED glitters in turn;
Answering call: Press the power button to answer the phone call while in the conversation;
Ending call: Press the power button to end the phone call while in the conversation;
Rejecting call: Press and hold the power button for 2s to reject the phone call;
Redial the last call: Double click the power button, the headphone will dial last phone number remotely and automatically;
Volume control: Under the music or conversation mode, move the volume up or down button to increase or decrease the volume.

6

Previous / Next: In the state of music mode, press the volume-up button shortly to the previous song and press the volume-down button shortly to the next song.
Pause / Play: In the state of music mode, click the middle of the functional button to pause the music and click again to play continuously.

Gesture touch operations :

7

Next music: Two fingers glide upward or towards right side
Previous music: Two fingers glide downward or towards left side
Volume up: One finger glide upward or towards right side
Volume down: One finger glide downward or towards left side
Pause/play: Click the center of the touch area one time

LED light indications :

Charging----red LED light on and LED will off when fully charged;
Standby----blue LED glitters quickly
Pairing-----Red and Blue LED glitters in turn
Music mode----Blue LED glitters slowly
Low voltage-----Red LED glitters quickly

尺寸: 320X160mm